






AN001: Fitting the E6 Earset Microphone

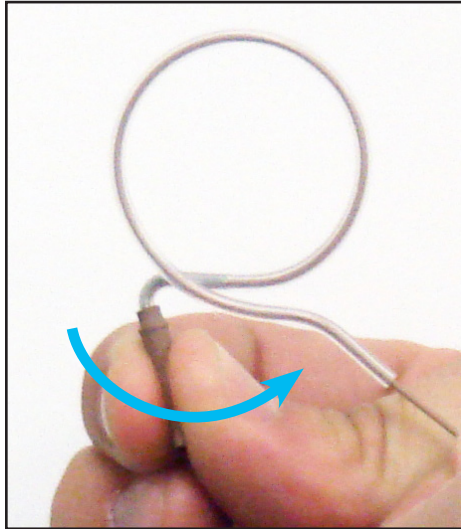

1. Tighten the ear loop.

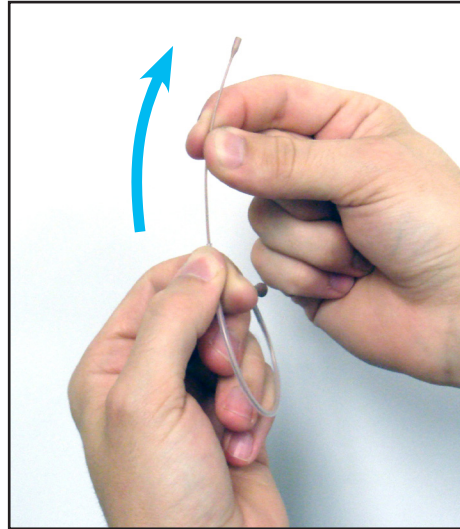


2. Slide your fingers to curve the boom.

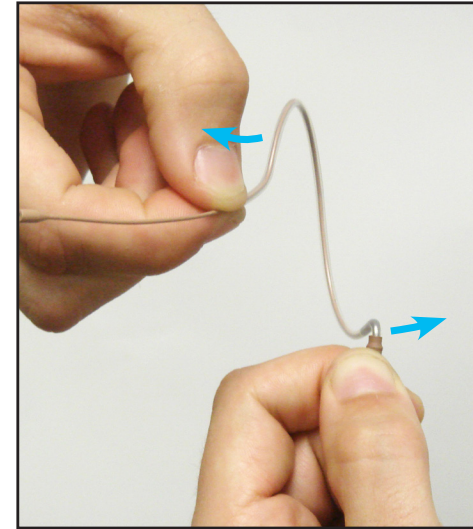

3. Spring the connector away from the boom.



4. Put the loop over the ear with the base behind the earlobe.
The boom can touch the cheek.

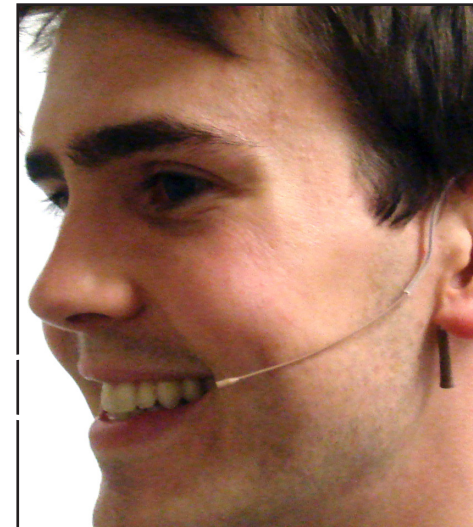

5. Put the mic near the corner of the mouth.